

Lubricator Assembly


1000 Series

Parts Information





Lubricator Assembly 1000 Series L361X1-XXX Exploded Diagram

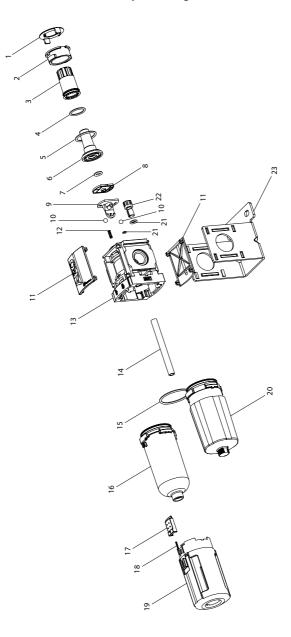

(Dwg. 15318603)

2 15301815_ed2

Lubricator Assembly 1000 Series L361X1-XXX Parts List

Item	Part Description	Material	Part Number
1	Scale Plate	Acetal	
2	Sight Dome Ring		
3	Outer Sight Dome	Polycarbonate	
4	Outer Sight Dome O-Ring	Nitrile	
5	Inner Sight Dome O-Ring		
6	Inner Sight Dome	Polycarbonate	
7	Damper Plate O-Ring	Nitrile	
8	Damper Plate	Acetal	
9	Damper	Nitrile	
10	Check Ball	Steel	
11	Filter Body Cover	Acetal	
12	Charge Valve Spring	Stainless Steel	
13	Lubricator Body		
	1/8"BSP (L361A1-1X0)	Aluminum	
	1/4" BSP (L361B1-1X0)		
	1/8" NPT (L36111-1X0)		
	1/4" NPT (L36121-1X0)		
14	Suction Tube	Nylon	
15	Bowl O-Ring	Nitrile	
16	Poly Bowl (Includes Items 15, 17, 18 & 19)		
	(L361X1-100)	Polycarbonate	104311
17	Lock Button		
	(L361X1-100)	Acetal	
18	Lock Button Spring		
	(L361X1-100)	Stainless Steel	
19	Bowl Guard		
	(L361X1-100)	Acetal	
20	Metal Bowl (Includes Item 15)		
	(L361X1-120)	Aluminum	104312
21	Fill Cap O-Ring	Nitrile	
22	Fill Cap	Acetal	
	Lubricator Repair Kit (Includes Items 1, 2, 3, 4, 5, 7, 8, 9, 14, 15, 21, 22)	Nitrile	104313
	Sight Dome Repair Kit (Includes Items 1, 2, 3, 4, 5, 6, 14)	Polycarbonate & Nitrile	104314
23	C-Bracket	Steel	104407

Parts and Maintenance

When the life of the product has expired, it is recommended that the product be disassembled, degreased and parts be separated by material so that they can be recycled.

Product repair and maintenance should only be carried out by an authorized Service Center.

Refer all communications to the nearest Ingersoll Rand Office or Distributor.

Related Documentation

For additional information refer to: Safety Information Manual 15301765. Product Information Manual 15301773. Maintenance Information Manual 15301781.

Manuals can be downloaded from www.ingersollrandproducts.com

15301815_ed2 3

Part No: 100400-58

www.ingersoll rand products.com

© 2012 Ingersoll-Rand Company

