

Regulator Assembly


1000 Series

Parts Information





Regulator Assembly 1000 Series R371X1-XXX Exploded Diagram

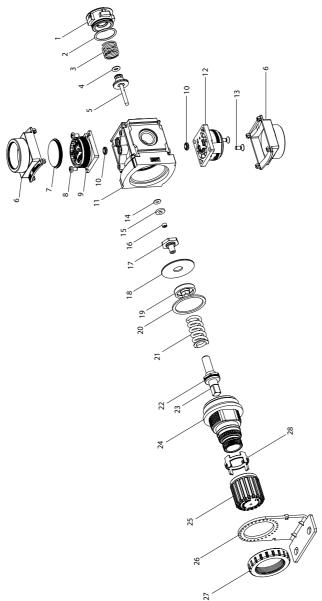

(Dwg. 15318595)


2 15301807_ed1

Regulator Assembly 1000 Series R371X1-XXX Parts List

Item	Part Description	Material	Part Number					
1	Valve Guide	Acetal						
2	Valve Guide O-Ring	Nitrile						
3	Valve Spring	Stainless Steel						
4	Valve O-Ring	Nitrile						
5	Valve Assembly	Brass+Nitrile						
6	Regulator Body Cover	Acetal						
7	Gauge Window							
	(R371X1-6X0, R371X1-7X0, R371X1-9X0)	Polycarbonate						
8	Gauge Bolt							
	(R371X1-6X0, R371X1-7X0, R371X1-9X0)	Steel						
9	Gauge (includes (2) item 8)		•					
	0-140 psig (R371X1-6X0)		104310					
10	Gauge O-Ring	Nitrile						
11	Regulator Body							
	1/8" BSP (R371A1-XX0)							
	1/4" BSP (R371B1-XX0)	1						
	1/8" NPT (R37111-XX0)	Aluminum						
	1/4" NPT (R37121-XX0)	1						
12	Block Cover	Acetal						
13	Block Cover Bolt	Steel						
14	Stem O-Ring	Nitrile						
15	Stem O-Ring Holder	Aluminum						
16	Relief Valve Gasket	Nitrile						
17	Relief Valve	Acetal						
18	Diaphragm	Nitrile+Acetal						
19	Diaphragm Shell							
20	Diaphragm Ring	Acetal						
21	Adjusting Spring							
	0-30 psig (R371X1-4X0)		104305					
	0-60 psig (R371X1-2X0)		104306					
	0-140 psig (R371X1-1X0, R371X1-6X0)	Steel	104307					
22	Adjusting Bolt							
23	Adjusting Nut							
24	Bonnet	A1						
25	Handle	Acetal						
26	L-Bracket	Steel						
27	Panel Mount Nut	Nylon						
	No Gauge Assembly (See Page 4)							
	Service Kit (Includes Items 1, 2, 3, 4, 5, 16, 17, 18, 19 & 20)							
	Relieving (R371X1-X00)		104302					
	Non-Relieving (R371X1-X20)		104303					
28	Tamper Kit	Nylon	104304					

15301807_ed1 3

No Gauge Assembly 1000 Series Exploded Diagram

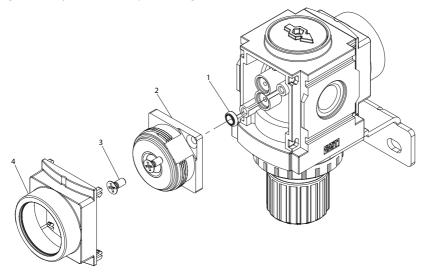

(Dwg. 15318645)

No Gauge Assembly 1000 Series Parts List

Item	Part Description	Material	Part Number	ltem	Part Description	Material	Part Number
1	Gauge O-Ring	Nitrile		3	Block Cover Bolt	Steel	
2	Gauge Plate	Acetal		4	Regulator Body Cover	Acetal	

Parts and Maintenance

When the life of the tool has expired, it is recommended that the tool be disassembled, degreased and parts be separated by material so that they can be recycled.

Tool repair and maintenance should only be carried out by an authorized Service Center.

Refer all communications to the nearest Ingersoll Rand Office or Distributor.

Related Documentation

For additional information refer to:

Safety Information Manual 15301765.

Product Information Manual 15301773.

Maintenance Information Manual 15301781.

Manuals can be downloaded from fluids.ingersollrand.com

Part No: 100400-57

fluids.ingersollrand.com

© 2009 Ingersoll Rand Company

