

# **Combination Assembly**


1500 Series

# **Parts Information**





## Combination 1500 Series C382X1-XXX Exploded Diagram

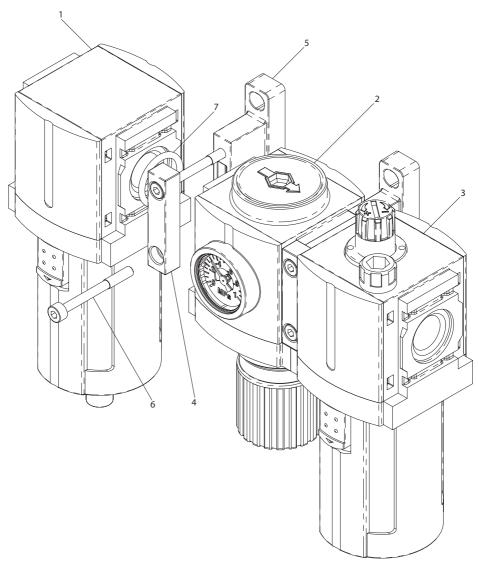

(Dwg. 15321953)

2 15301880\_ed1

### Combination 1500 Series C382X1-XXX Diagram Parts List

Item	Part Description	Material	Part Number
1	Filter (See Part List 15301849)		F352XX-XXX
2	Regulator (See Part List 15301856)		R372X1-XXX
3	Lubricator (See Part List 15301864)		L362X1-XXX
*	Piggyback (See Part List 15301872)		P392XX-XXX
4	I-Bracket	Aluminum	- 104400
5	T-Bracket		
6	Bolt	Steel	
7	"O" Ring	Nitrile	

<sup>\*</sup> Not illustrated.

### **Parts and Maintenance**

When the life of the tool has expired, it is recommended that the tool be disassembled, degreased and parts be separated by material so that they can be recycled.

Tool repair and maintenance should only be carried out by an authorized Service Center.

Refer all communications to the nearest Ingersoll Rand Office or Distributor.

#### **Related Documentation**

For additional information refer to: Safety Information Manual 15301765. Product Information Manual 15301773. Maintenance Information Manual 15301781.

Manuals can be downloaded from fluids.ingersollrand.com.

15301880\_ed1 3

Part No: 100400-65

fluids.ingersollrand.com

© 2009 Ingersoll Rand Company

