

# **Combination Assembly**


3000 Series

# **Parts Information**





## Combination Assembly 3000 Series C384X1-XXX Exploded Diagram

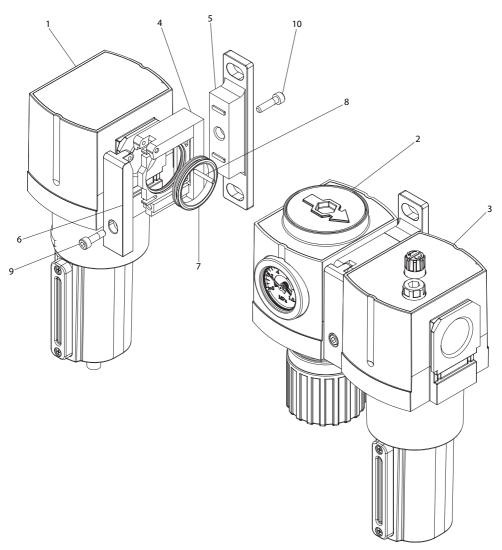

(Dwg. 15322027)

2 15301989\_ed1

### Combination Assembly 3000 Series C384X1-XXX Parts List

Item	Part Description	Material	Part Number
1	Filter (See Part List 15301948)		F354XX-XXX
2	Regulator (See Part List 15301955)		R374X1-XXX
3	Lubricator (See Part List 15301963)		L364X1-XXX
*	Piggyback (See Part List 15301971)		P394XX-XXX
4	Spacer Housing	Aluminum	104402
5	T-Bracket		
6	Spacer Cover		
7	Spacer "O" Ring	Nitrile	
8	Pin	Stainless Steel	
9	Bolt	Steel	
10	T-Bracket Bolt		

<sup>\*</sup> Not Illustrated.

### **Parts and Maintenance**

When the life of the tool has expired, it is recommended that the tool be disassembled, degreased and parts be separated by material so that they can be recycled.

Tool repair and maintenance should only be carried out by an authorized Service Center.

Refer all communications to the nearest Ingersoll Rand Office or Distributor.

### **Related Documentation**

For additional information refer to: Product Safety Information Manual 15301765. Product Information Manual 15301773. Maintenance Information Manual 15301781.

 $Manuals\ can\ be\ downloaded\ from\ fluids.ingersoll rand.com.$ 

15301989\_ed1 3

Part No. 100400-75

fluids.ingersollrand.com

© 2009 Ingersoll Rand Company

