



	136	V	G	L	-	XXX	-	X	XX	X
Tool Series										
136										
Tool Style										
V = Vertical										
Tool Type										
G = Grinder										
Throttle Type										
L = Lever										
Speed Options (RPM)										
135 = 13,500										
180 = 18,000										
Wheel Type										
---- = Sander										
D = Type 27										
Termination Code										
3T = 3/8-24										
5T = 5/8-11										
Guard										
3 = 3"										
4 = 4"										


Safety Recommendations

For your safety and the safety of others, read and understand the safety recommendations before operating any grinder.

Always wear protective equipment and clothing.




For additional information on eye protection, refer to Federal OSHA Regulations, 29 CFR, Section 1910.133, Eye and Face Protection, and ANSI Z87.1, Occupational and Educational Eye and Face Protection. This standard is available from the American National Standards Institute, Inc., 11 West 42nd Street, New York, NY 10036.

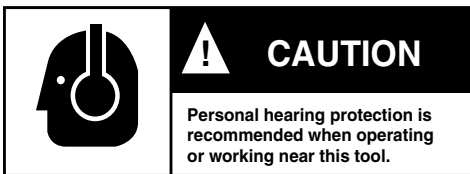

Hearing protection is recommended in high noise areas (above 85 dBA). Close proximity of additional tools, reflective surfaces, process noises, and resonant structures can substantially contribute to the sound level experienced by the operator. For additional information on hearing protection, refer to Federal OSHA Regulations, 29 CFR, Section 1910.95, Occupational Noise Exposure, and American National Standards Institute, ANSI S12.6, Hearing Protectors.

- **Gloves and other protective clothing should be worn as required.**

- **Do not wear clothing that may restrict movement, become entangled or in any way interfere with the safe operation of grinders.**

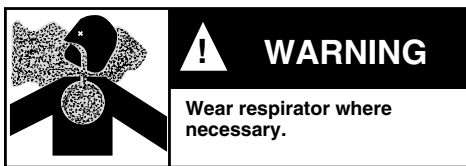

Grinding or other use of this tool may produce hazardous fumes and/or dust. To avoid adverse health effects utilize adequate ventilation and/or a respirator. Read the material safety data sheet of any materials involved in the grinding process.

Cleco grinders are designed to operate on 90 psig (6.2 bar) max. air pressure. If the tool is properly sized and applied, higher air pressure is unnecessary. Excessive air pressure increases the loads and stresses on the tool parts. Installation of a filter-regulator-lubricator in the air supply line is highly recommended.

Never use the air hose for supporting, lifting, or lowering the tool. Use a safety line or cable on the tool when working in elevated areas.

Before tool is connected to air supply, check throttle for proper operation, i.e., throttle moves freely and returns to closed position. Being careful not to endanger adjacent personnel, clear air hose of accumulated dust and moisture. Use protective barriers where necessary — hot sparks can burn and/or ignite flammable materials. Barriers also help reduce noise levels. Before removing tool from


service or changing accessories, make sure air line is shut off and drained of air to prevent the tool from operating if the throttle is accidentally engaged. The use of a self-relieving valve for this purpose, close to the tool or point of operation, is highly recommended.



The wheel guard is designed to prevent serious injury to the operator in the event of wheel failure and must not be modified in any way. Any wheel guard that is damaged or bent must be replaced.

NOTE: The grinder must be held so that the opening in the guard is away from the operator.

The guard must be securely attached to the grinder with the bolt, nut and lockwasher in place and torqued to 30 - 40 in. lbs.

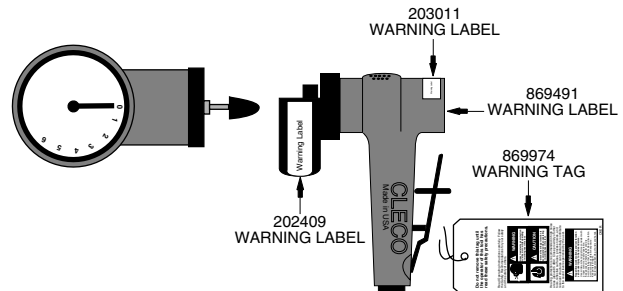

The speed rating, warning tags and warning labels should be maintained or replaced for legibility in the event of damage. Speed rating, warning tags, and warning labels are available from the manufacturer.

Before mounting a wheel, after all tool repairs, and whenever a grinder is issued for use, check the free speed of the grinder with a tachometer to make certain that the actual free speed at 90 psig (6.2 bar) does not exceed the rated free speed stamped on the tool. Grinders in use on the job must be similarly checked at least once every twenty hours of operation, or once every week, whichever is more frequent. Checking free speed after the removal of each worn wheel and before mounting a new wheel is highly recommended.



INSPECT THE GRINDING WHEEL!

Check the maximum safe RPM marked on the wheel. **Never use a wheel rated below the actual tool speed.** Inspect the wheel for cracks or chips, water stains, or signs of abuse or improper storage. **Cracked, chipped or faulty grinding wheels are dangerous.** They must be destroyed rather than risk their use by someone who may not notice that they are damaged.

Causes of abrasive wheel failures have been traced to such factors as:

- Dropping, bumping, or abuse (careless handling of the grinder or wheel)
- Improper mounting

Safety Recommendations

- Imbalance
- Improper shipment or storage
- Exposure to water, solvents, high humidity, freezing and extreme temperatures
- Mismatched speed ratings
- Age

Abrasive wheels known to have been subjected to any of the above conditions can burst violently. Never operate a vertical grinder without proper wheel guard in place.

CHECK FLANGE

Check the grinder spindle and driving flange for signs of damage or abuse. The shape of a Type 27 wheel requires a special flange. The spindle must not be bent and the threads should be free of any damage that might keep an abrasive wheel and its mount from locating centrally or seating properly against the driving flange.

ABRASIVE WHEEL MOUNTING & BEGINNING GRINDING OPERATION

The adapter nut should be tightened only enough to prevent slippage and satisfactorily transfer the driving torque of the spindle to the wheel through the adapter assembly. Do not over-tighten.

Before beginning operations or after mounting a wheel, the tool must be run for one (1) minute in a protected enclosure to check the integrity of the wheel. During this time or any other time, no one should stand in front of or in line of the wheel. When starting work with a cold wheel, apply it gradually to the workpiece until the wheel becomes warm.

DO NOT CONTINUE TO USE A GRINDER IF:

- It is not equipped with the proper wheel guard
- The speed rating of the wheel is less than the speed of the grinder
- It starts to vibrate
- You sense any changes in tool speed or an unusual increase in noise output that would indicate the tool is running at excessive speed.
- You notice excessive end play in the spindle
- You hear any unusual sound from the grinder

RETURN THE TOOL TO THE TOOL CRIB FOR SERVICE IMMEDIATELY!



WARNING

Repetitive work motions and/or vibration may cause injury to hands and arms.


Use minimum hand grip force consistent with proper control and safe operation.
Keep body and hands warm and dry.
Avoid anything that inhibits blood circulation.
Avoid continuous vibration exposure.
Keep wrists straight.
Avoid repeated bending of wrists and hands.

Some individuals may be susceptible to disorders of the hands and arms when performing tasks consisting of highly repetitive motions and/or exposure to extended vibration. Cumulative trauma disorders such as carpal tunnel syndrome and tendonitis may be caused or aggravated by repetitious, forceful exertions of the hands and arms. Vibration may contribute to a condition called Raynaud's Syndrome.

These disorders develop gradually over periods of weeks, months, and years. It is presently unknown to what extent exposure to vibrations or repetitive motions may contribute to the disorders. Hereditary factors, vasculatory or circulatory problems, exposure to cold and dampness, diet, smoking and work practices are thought to contribute to the conditions. Any tool operator should be aware of the following warning signs and symptoms so that a problem can be addressed before it becomes a debilitating injury. Any user suffering prolonged symptoms of tingling, numbness, blanching of fingers, clumsiness or weakened grip, nocturnal pain in the hand, or any other disorder of the shoulders, arms, wrists, or fingers is advised to consult a physician. If it is determined that the symptoms are job related or aggravated by movements and postures dictated by the job design, it may be necessary for the employer to take steps to prevent further occurrences. These steps might include, but are not limited to, repositioning the workpiece or redesigning the workstation, reassigning workers to other jobs, rotating jobs, changing work pace, and/or changing the type of tool used so as to minimize stress on the operator. Some tasks may require more than one type of tool to obtain the optimum operator/tool/task relationship.

The following suggestions will help reduce or moderate the effects of repetitive work motions and/or extended vibration exposure:

- Use a minimum hand grip force consistent with proper control and safe operation
- Keep body and hands warm and dry (cold weather is reported to be a major factor contributing to Raynaud's Syndrome)
- Avoid anything that inhibits blood circulation
 - Smoking Tobacco (another contributing factor)
 - Cold Temperatures
 - Certain Drugs

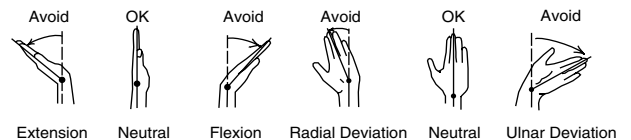

- Tasks should be performed in such a manner that the wrists are maintained in a neutral position, which is not flexed, hyperextended, or turned side to side
- Stressful postures should be avoided — select a tool appropriate for the job and work location
- Avoid highly repetitive movements of hands and wrists, and continuous vibration exposure (after each period of operation, exercise to increase blood circulation)
- Use quality abrasive wheels
- Keep tool well maintained and replace worn parts

Work gloves with vibration reducing liners and wrist supports are available from some manufacturers of industrial work gloves. Tool wraps and grips are also available from a number of different manufacturers. These gloves, wraps, and wrist supports are designed to reduce and moderate the effects of extended vibration exposure and repetitive wrist trauma. Since they vary widely in design, material, thickness, vibration reduction, and wrist support qualities, it is recommended that the glove, tool wrap, or wrist support manufacturer be consulted for items designed for your specific application. **WARNING! Proper fit of gloves is important. Improperly fitted gloves may restrict blood flow to the fingers and can substantially reduce grip strength.**

Safety Recommendations

USE QUALITY ABRASIVE WHEELS

The primary source of vibration when using a portable grinder is an abrasive wheel that is out of balance, out of round, untrue, or possibly any combination of all three.

 
The use of quality abrasive wheels which are well balanced, round, and true is highly recommended as they have been found to significantly reduce vibration. Some abrasive wheels lose their balance, roundness, and trueness as they wear from use. Because of the abusive nature of the vibration caused by out of balance, out of round, and untrue condition of some abrasive wheels, it is felt that these wheels are more susceptible to failure. Excessive vibration may signal eminent wheel failure. (Out of balance abrasive wheel, caused by grinding the wheel to a stop after the power has been shut off can result in changes to the balance and shape of the wheel.) Be sure the grinding wheel has stopped before setting the tool down. Set the tool in a tool rest or tool holder when not in use.

WIRE BRUSHES

If a grinder is used for wire brushing applications the same problems of balance, roundness, and trueness as experienced with abrasive wheels prevail. Use quality wire brushes.

USE A PREVENTIVE MAINTENANCE PROGRAM

Tool abuse or poor maintenance procedures can amplify and contribute to the vibration produced by the abrasive wheel. A preventive maintenance program featuring scheduled periodic inspections and proper maintenance is the best way to assure safety in your portable grinding operations. A well managed program can, for example, detect such things as speed variations due to wear, flanges or spindles that have been damaged from abuse, or bad bearings damaged by foreign matter or lack of lubrication. Problems such as these can affect the wheel trueness when the grinder is running and contribute to the vibration. Rotor blades that are worn or chipped can lock up motor and result in grinding wheel spinoff and should be replaced. Rotor blades should be checked periodically and replaced if they measure less than 7/32" (5.5mm) at either end.



PROPER LUBRICATION

An automatic in-line filter-regulator-lubricator is recommended as it increases tool life and keeps the tool in sustained operation. The in-line lubricator should be regularly checked and filled with a good grade of 10W machine oil. Proper adjustment of the in-line lubricator is performed by placing a sheet of paper next to the exhaust ports and holding the throttle open approximately 30 seconds. The lubricator is properly set when a light stain of oil collects on the paper. Excessive amounts of oil should be avoided.

STORAGE

In the event that it becomes necessary to store the tool for an extended period of time (overnight, weekend, etc.), it should receive a generous amount of lubrication at that time and run for several seconds to distribute the oil before disconnecting from the air supply. This will reduce the possibility of corrosion and displace any water that may be trapped in the tool.

Note: Water in the air system increases tool maintenance costs.

Proper repair procedures and the use of original Cleco service parts and bearings rather than substitutes will return the tool to factory specifications of precision and balance, and minimize vibration.

For more information, see the latest edition of ANSI B186.1, Safety Code for Portable Air Tools, and ANSI B7.1 Safety Requirements for the Use, Care, and Protection of Abrasive Wheels available from the American National Standards Institute, Inc., 11 West 42nd Street, New York, NY 10036.

OPERATING INSTRUCTIONS

READ SAFETY RECOMMENDATIONS BEFORE OPERATING TOOL.

The 136 Series Vertical Grinders are designed to operate on 90psig (6.2 bar) maximum air pressure, using a 5/16" hose up to 8' in length. If additional length is required, the next larger hose size may be connected to the 8' whip hose.

LUBRICATION

An automatic in-line filter-lubricator is recommended as it increases tool life and keeps the tool in sustained operation. The in-line lubricator should be regularly checked and filled with a good grade of 10W machine oil. Proper adjustment of the in-line lubricator is performed by placing a sheet of paper next to the exhaust ports and holding the throttle open approximately 30 seconds. The lubricator is properly set when a light stain of oil collects on the paper. Excessive amounts of oil should be avoided.

STORAGE

In the event that it becomes necessary to store the tool for an extended period of time (overnight, weekend, etc.), it should receive a generous amount of lubrication at that time and run for several seconds to distribute the oil before disconnecting from the air supply.

SERVICE INSTRUCTIONS



DISASSEMBLY

Unscrew the bearing retainer (left hand threads) from the housing. This will allow the motor unit to be removed from the front of the motor housing. Use a suitable driver to drive the front rotor shaft out of the front rotor bearing. After removing the rotor collar, cylinder and rotor blades, drive the rear rotor shaft out of the rear rotor bearing.


REASSEMBLY

The tool is reassembled in reverse order of disassembly with special care being exercised when assembling the motor unit.

To reassemble the motor unit, assemble the front rotor bearing into the front bearing plate. Fit the rotor collar by sanding on a flat sheet of sandpaper so it stands out .0015" (.038mm) from the face of the front bearing plate when the front rotor bearing is held toward the rear. Slip the rotor collar (chamfered face first) over the front shaft of the rotor.

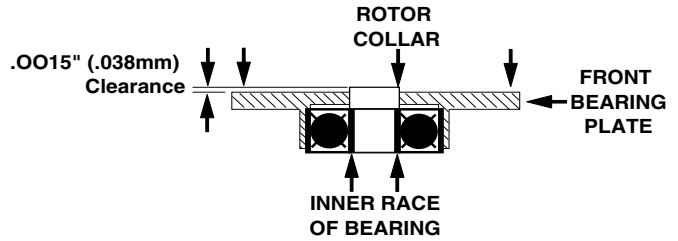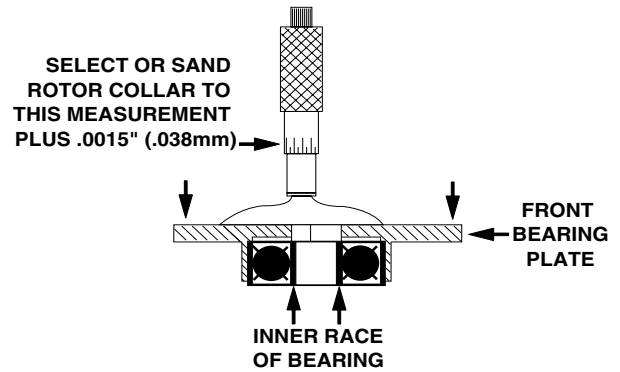

 Next, slip on the front bearing plate and the front rotor bearing. It is recommended that new rotor blades be installed at each repair cycle. If not replaced, the used ones must measure a minimum of 7/32" (5.5mm) at both ends. Failure of these parts could cause damage to more expensive components.




Insert the rotor blades in the rotor and slip the cylinder over the rotor. Assemble the rear rotor bearing into the rear rotor shaft by lightly tapping on the inner race of the rear rotor bearing until the rear bearing clamps against the rotor preventing rotation. Tap the rear rotor shaft until the rotor turns freely and will not touch either bearing plate under axial load.

Slip the motor unit into the motor housing and tighten the bearing retainer (left hand threads) securely.

After reassembly, place a few drops of 10W machine oil in the air inlet before installing the hose. This will ensure positive lubrication of all motor parts as soon as the air is applied.

CAUTION: After the tool is reassembled, be sure to check it for proper speed with a dependable tachometer before returning it to service.

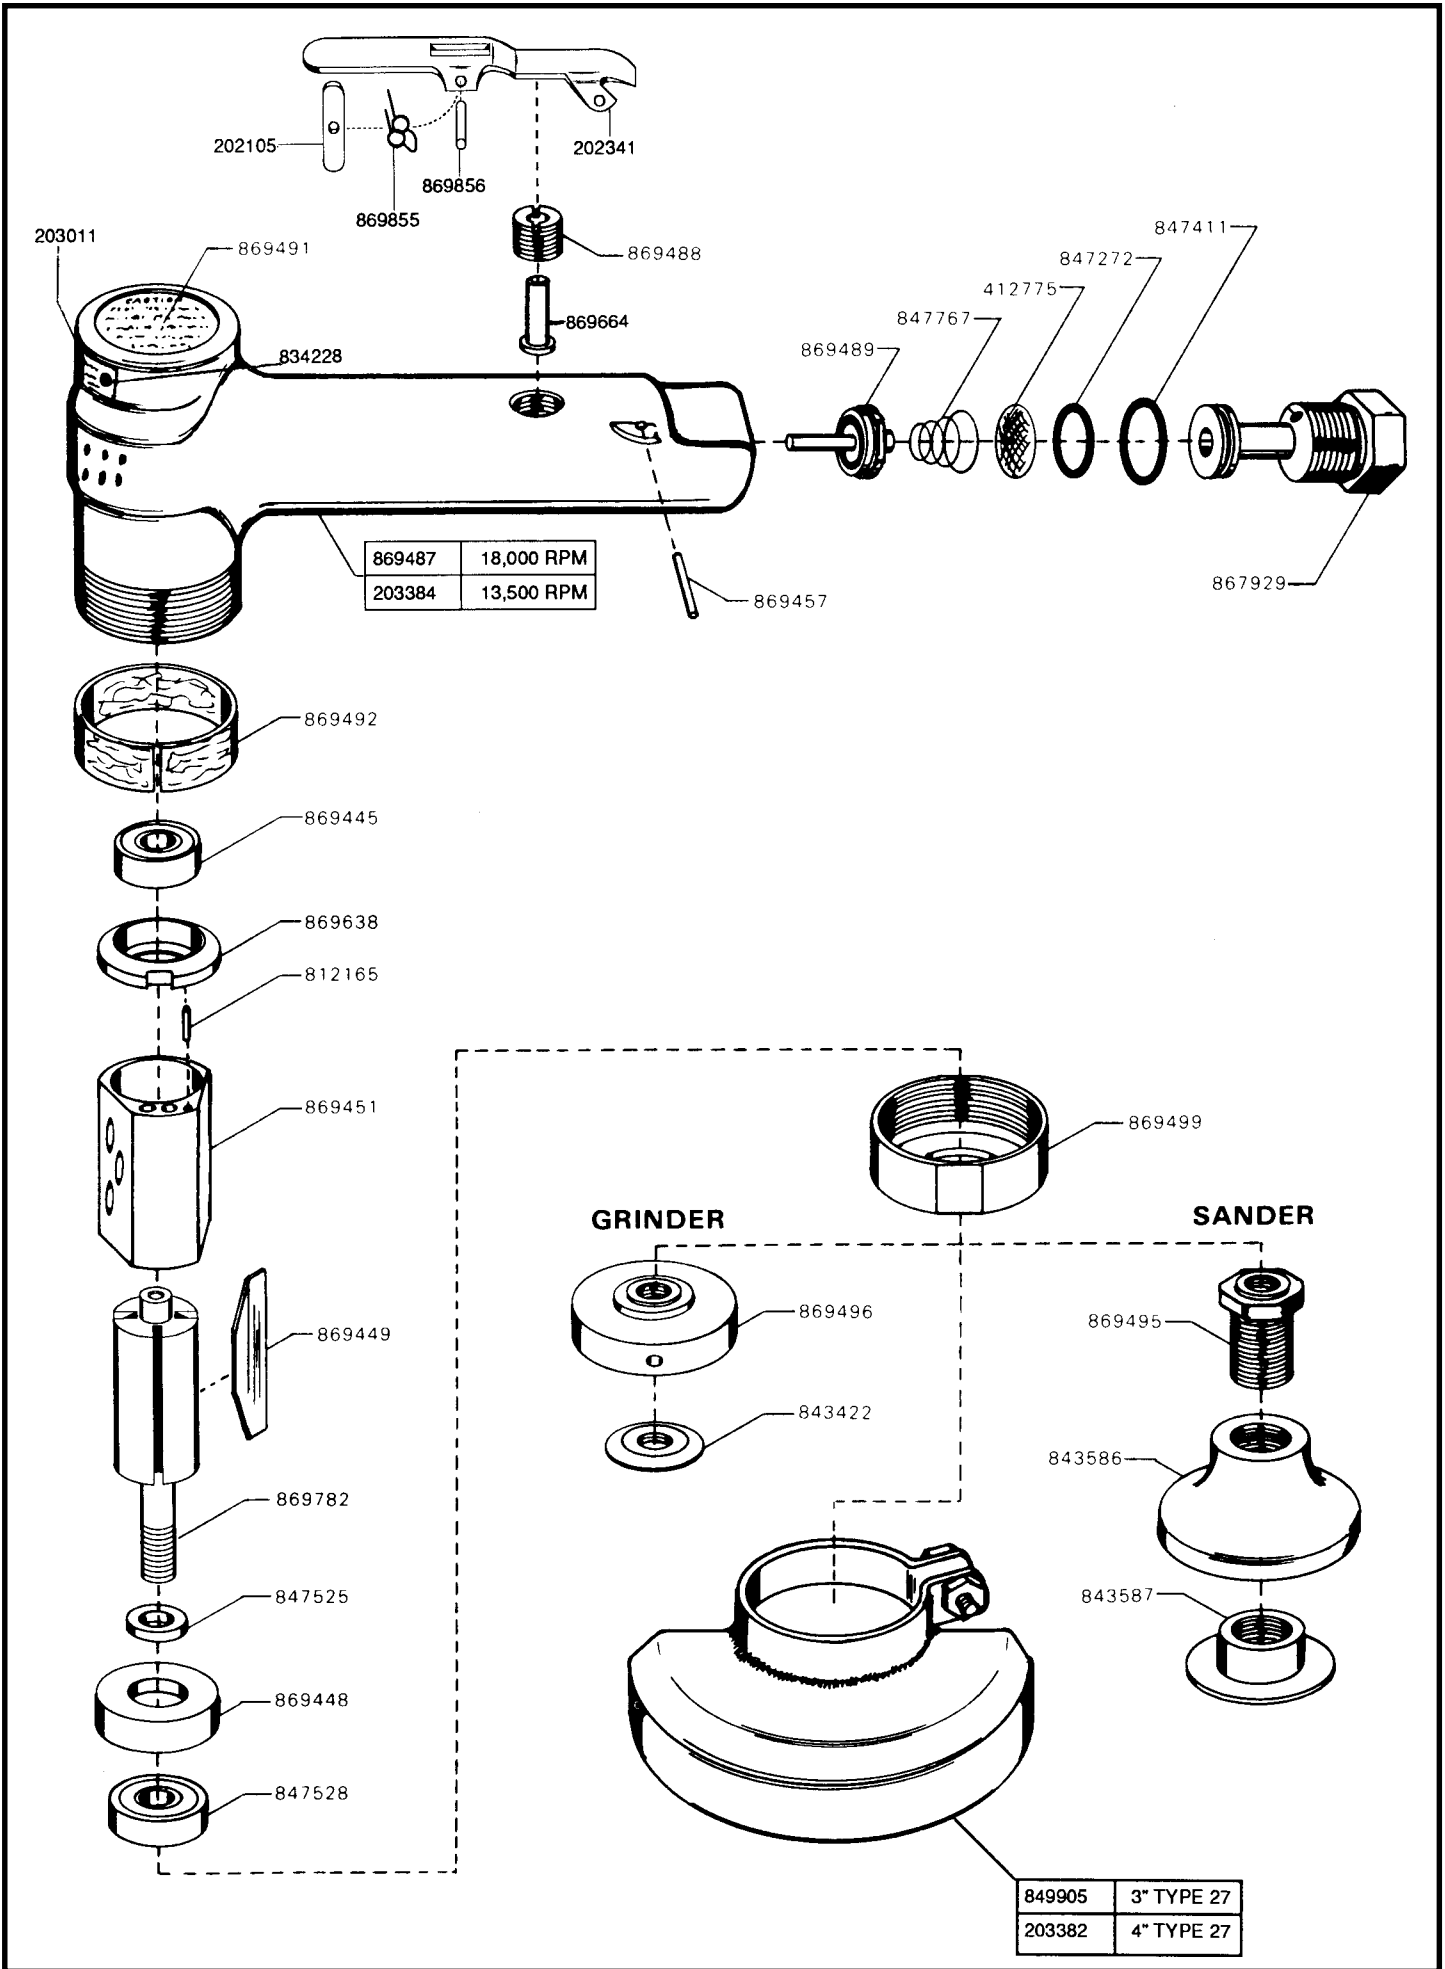

PARTS LIST — 136 SERIES VERTICAL GRINDER

Part No.	Name of Part	Qty.
202105	Toggle	1
202341	Throttle Lever	1
203011	Caution Tag (included in 203384, 869487)	1
203382	4" Type 27 Wheel Guard	1
203384	13,500 RPM Motor Housing (includes 869491, 203011, 834228)	1
412775	Air Inlet Screen	1
812165	Cylinder Pin (included in 869451)	1
834228	Drive Screw (included in 203384, 869487)	2
843422	Spindle End Nut	1
843586	Back Up Pad	1
843587	Back Up Pad Nut	1
847272	"O"-Ring 5/8" X 3/4"	1
847411	"O" -Ring 11/16 x 3/16"	1
847525	Rotor Collar	1
847528	Rotor Front Bearing	1
847767	Throttle Valve Spring	1
849905	3" Type 27 Wheel Guard	1
867929	Air Inlet Bushing	1
869445	Rotor Rear Bearing	1
869448	Front Bearing Plate	1
869449	Rotor Blade	4
869451	Cylinder (includes 812165)	1
869457	Throttle Lever Pin	1
869487	18,000 RPM Motor Housing (includes 869491, 203011, 834228)	1
869488	Throttle Pin Bushing	1
869489	Throttle Valve	1
869491	Instruction Tag (Included in 203384, 869487)	1
869492	Muffler	1
869495	Spindle Adaptor	1
869496	Type 27 Wheel Driving Flange	1
869499	Front Bearing Retainer	1
869638	Rear Bearing Plate	1
869664	Throttle Pin	1
869782	Rotor	1
869855	Spring	1
869856	Pawl Pin	1
<p>The complete motor housing may be purchased as a subassembly using the Part No. listed below:</p> <p style="margin-left: 40px;">136VGL-135 — Part No. 201406</p> <p style="margin-left: 40px;">136VGL-180 — Part No. 861829</p> <p>The Lock -Off Lever may be purchased as a subassembly using Part No. 201411.</p>		

Sales & Service Centers

Note: All locations may not service all products. Please contact the nearest Sales & Service Center for the appropriate facility to handle your service requirements.

Dallas, TX
**Apex Tool Group
Sales & Service Center**
1470 Post & Paddock
Grand Prairie, TX 75050
Tel: 972-641-9563
Fax: 972-641-9674

Detroit, MI
**Apex Tool Group
Sales & Service Center**
2630 Superior Court
Auburn Hills, MI 48326
Tel: 248-391-3700
Fax: 248-391-7824

Houston, TX
**Apex Tool Group
Sales & Service Center**
6550 West Sam Houston
Parkway North, Suite 200
Houston, TX 77041
Tel: 713-849-2364
Fax: 713-849-2047

Lexington, SC
Apex Tool Group
670 Industrial Drive
Lexington, SC 29072
Tel: 800-845-5629
Tel: 803-951-7544
Fax: 803-358-7681

Los Angeles, CA
**Apex Tool Group
Sales & Service Center**
15503 Blackburn Avenue
Norwalk, CA 90650
Tel: 562-623-4457
Fax: 562-802-1718

Seattle, WA
**Apex Tool Group
Sales & Service Center**
2865 152nd Avenue N.E.
Redmond, WA 98052
Tel: 425-497-0476
Fax: 425-497-0496

York, PA
**Apex Tool Group
Sales & Service Center**
3990 East Market Street
York, PA 17402
Tel: 717-755-2933
Fax: 717-757-5063

Canada
**Apex Tool Group
Sales & Service Center**
5925 McLaughlin Road
Mississauga, Ont. L5R 1B8
Canada
Tel: 905-501-4785
Fax: 905-501-4786

Germany
Cooper Power Tools
GmbH & Co. OHG
a company of
Apex Tool Group, LLC
Industriestraße 1
73463 Westhausen
Germany
Tel: +49 (0) 73 63 81 0
Fax: +49 (0) 73 63 81 222

England
Cooper Power Tools
GmbH & Co. OHG
a company of
Apex Tool Group, LLC
C/O Spline Gauges
Piccadilly, Tamworth
Staffordshire B78 2ER
United Kingdom
Tel: +44 1827 8741 28
Fax: +44 1827 8741 28

France
Cooper Power Tools SAS
a company of
Apex Tool Group, LLC
25 rue Maurice Chevalier
77330 Ozoir-La-Ferrière
France
Tel: +33 1 6443 2200
Fax: +33 1 6443 1717

China
Cooper (China) Co., Ltd.
a company of
Apex Tool Group, LLC
955 Sheng Li Road,
Heqing Pudong, Shanghai
China 201201
Tel: +86-21-28994176
Fax: +86-21-51118446

Mexico
Cooper Tools
de México S.A. de C.V.
a company of
Apex Tool Group, LLC
Vialidad El Pueblito #103
Parque Industrial Querétaro
Querétaro, QRO 76220
Mexico
Tel: +52 (442) 211-3800
Fax: +52 (442) 103-0443

Brazil
Cooper Tools Industrial Ltda.
a company of
Apex Tool Group, LLC
Av. Liberdade, 4055
Zona Industrial - Iporanga
SP Brazil
Tel: +55 15 2383929
Fax: +55 15 2383260

Hungary
Cooper Tools Hungaria Kft.
a company of
Apex Tool Group, LLC
Berkenyefa sor 7
Pf: 640
9027 Győr
Hungary
Tel: +36 96 66 1383
Fax: +36 96 66 1135

Apex Tool Group, LLC
1000 Lufkin Road
Apex, NC 27539
Phone: 919-387-0099
Fax: 919-387-2614
www.apextoolgroup.com

Cleco®